



Checked cowl instructions

LEFT COWL

TOP COWL

RIGHT COWL

Cut Lines

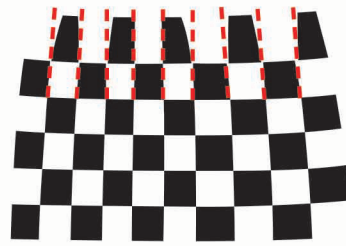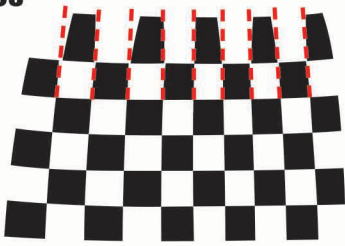

TYPE B

Checks decals are fitted to the to the Tamiya cowling.

Make cuts in decals to the second column of checks. Take care to not trim away edges of black checks.

Apply the top panel decal first. Align the rear column of checks with the back of the cowl. The rows will fit inside the panel lines.

Apply one of the side panel decals. Align the top rear check with the back of the cowl and the top panel decal. The 6th row will fit inside the panel line.

The remaining rows will wrap around to the bottom of the cowl.


Apply the other side panel decal similarly. Align the top rear check with the back of the cowl and the top panel decal. The 6th row will fit inside the panel line. The remaining rows will wrap around to the bottom of the cowl and meet in the center.

For the type B check decals, the front column of checks will wrap around the cowl lip.

For the type A check decals, the front column of checks will end at the panel line on the cowl lip.



Panel line

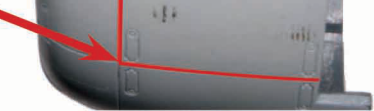


Panel line



Panel line



Invasion stripes tip: Remember to mask for the national insignias on both the wings and the fuselage sides so the insignia decals have only one color underneath. Failure to do so can result in the color change beneath showing through the white areas of the national insignias.

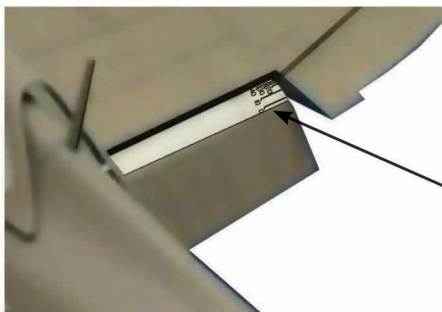

Flap Indicator
Left & Right

